

Montageanleitung

Mounting instructions



Lenkererhöhungen
Risers

F35A

Passend für / fits for:

BMW R1200GS LC	2013 → 2019
BMW R1200GS LC Adventure	2013 → 2019
BMW R1250GS LC	2018 →
BMW R1250GS LC Adventure	2018 →
BMW S1000XR	2014 → 2019






VOIGT MOTO TECHNIK

Content of delivery:

- 2x handlebar risers (1)
- 4x allen bolts M8x70 (2)
- 1x cable tie
- 1x product certificate
- 1x mounting instructions

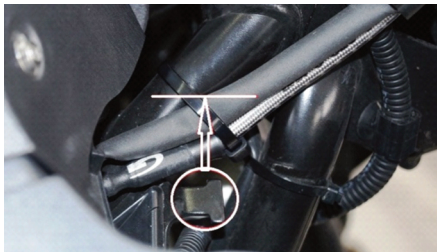

Advice: Once the risers are installed, make sure to check when the handlebars are at full steering angle, that there is no tension on the throttle cable, clutch and brake lines/hoses and that none of these rub on other components.

Options for extending hydraulic lines:

If the clutch or brake line is stretched, you can use our adapters to extend them. The brake line can also be relieved. To do this, please proceed as follows: The brake line is attached to the frame holder behind the steering tube with a cable tie. Remove this cable tie. Then fix the brake line to the frame again with the enclosed cable tie (as seen on the picture).

Lieferumfang:

- 2x Lenkererhöhungen (1)
- 4x Innensechskantschrauben M8x70 (2)
- 1x Kabelbinder
- 1x Allgemeine Betriebserlaubnis
- 1x Montageanleitung & Montagehinweise

Hinweis: Bitte achten Sie nach erfolgter Montage darauf, dass auch bei voll eingeschlagenem Lenker der Brems- und Kupplungsslauch, Züge und Kabel weder spannen noch scheuern.

Möglichkeiten zum Verlängern von hydraulischen Leitungen:

Sollte die *Kupplungs-* oder *Bremsleitung* spannen, können Sie unsere Adapter zur Verlängerung verwenden. Die *Bremsleitung* kann auch entlastet werden. Hierfür gehen Sie bitte wie folgt vor: Die *Bremsleitung* ist hinter dem Steuerrohr mit einem Kabelbinder am Rahmen-Halter befestigt. Diesen Kabelbinder entfernen Sie. Dann fixieren Sie die *Bremsleitung* erneut mit dem beiliegendem Kabelbinder am Rahmen (siehe Abbildung).

Montageanleitung

Mounting instructions

