

Montageanleitung

Mounting instructions



Lenkererhöhungen

Risers

SN25-1

Passend für:

Motorräder mit 22mm (22,2) Lenker und Bohrungsabstand von 32-38mm (meist Honda).

Fits for:

Motorcycles with 22mm (22,2) handlebar and hole distance of 32-38mm (mostly Honda).





VOIGT MOTO TECHNIK

Lieferumfang:

- 2x Lenkererhöhungen (1)
- 4x Innensechskantschrauben M8x55 (2)
- 1x Allgemeine Betriebserlaubnis
- 1x Montageanleitung & Montagehinweise

Hinweis: Für beiliegende Schrauben gilt: M8=23Nm. Beachten Sie zuerst die Schrauben auf der Vorderseite (**a**) und dann die Schrauben auf der Fahrerseite (**b**) anzuziehen. Bitte achten Sie nach erfolgter Montage darauf, dass auch bei voll eingeschlagenem Lenker der Bremsschlauch, Züge und Kabel weder spannen noch scheuern. Sollte dies dennoch der Fall sein, müssen diese getauscht oder verlängert werden.


Content of delivery:

- 2x handlebar risers (1)
- 4x allen bolts M8x55 (2)
- 1x product certificate
- 1x mounting instructions

Advice: For enclosed screws: M8=23Nm. Note first tighten the screws on the front (**a**) and then the screws on the driver's side (**b**). Once the risers are installed, make sure to check when the handlebars are at full steering angle, that there is no tension on the throttle cable, clutch and brake lines/hoses and that none of these rub on other components. Should this still be the case, they must be replaced or extended.

Montageanleitung

Mounting instructions

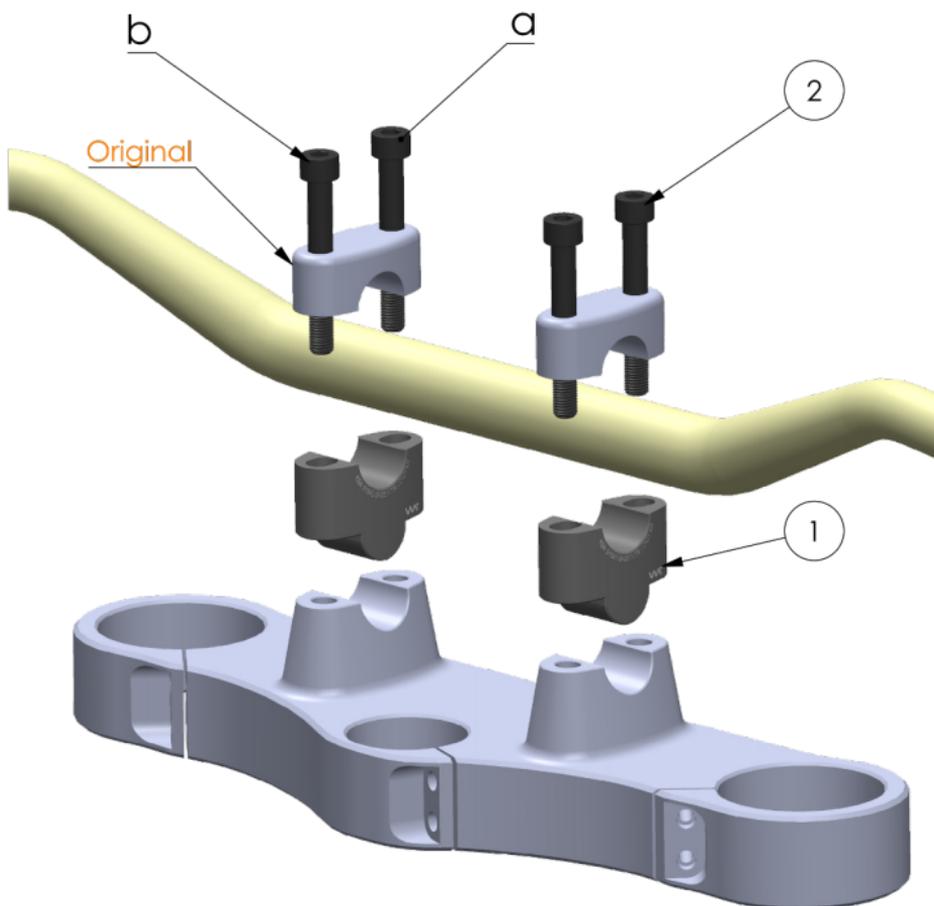

FAHRTRICHTUNG - RIDING DIRECTION 

